

Installation instructions for PZ4AL-01597-00, PZ4AL-01588-00
Under Run Protective Shield Fuel Tank

TOYOTA LC 200



LEXUS LX



LC 200

LX 570

Model year:

2008 - 10.2015

2012 - 10.2015

Applicability:

UZJ200L-GNAEKW
VDJ200L-GNTEZW
VDJ200L-GMTVZW
URJ202L-GNTEKW
VDJ200L-GNTEZW

URJ201L-GNTGKW

Part Number:

Steel: PZ4AL-1597-00
Aluminium: PZ4AL-1588-00



Weight:


Steel: 17.37 kg
Aluminium: 10.28 kg



Installation Time:

30 min

A

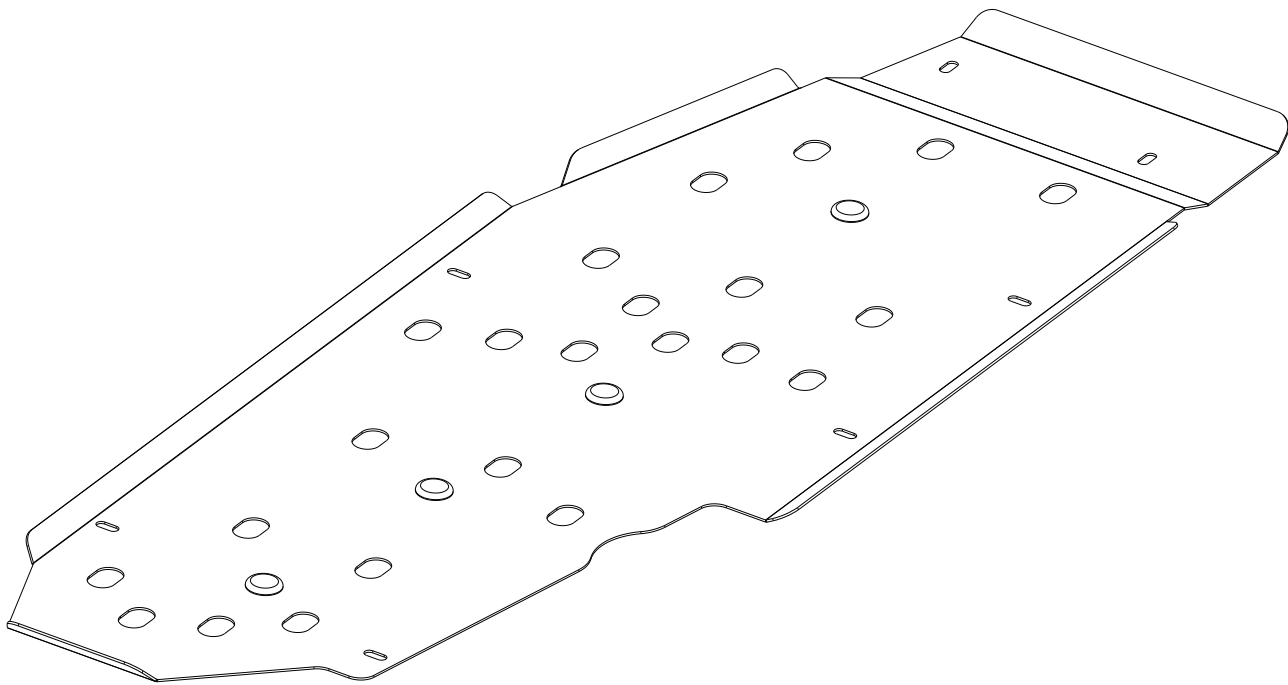

PZ4AL-01588-60

B




1x

C




1x

D

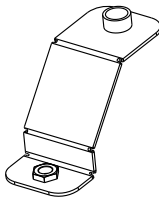


1x

 E



2x


F

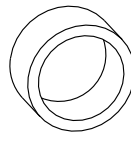

h=10

2x

 
G1



M8x30

5x


G2

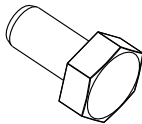

M10x20

3x


G3

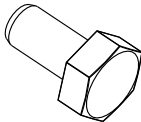

M10x30

2x

 
H1



d=8

5x

H2

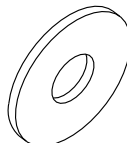

d=10

5x

I1



d=8


5x

I2



d=10


5x

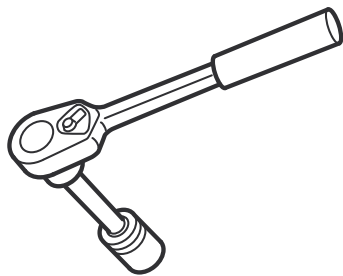


13 mm
17 mm



1

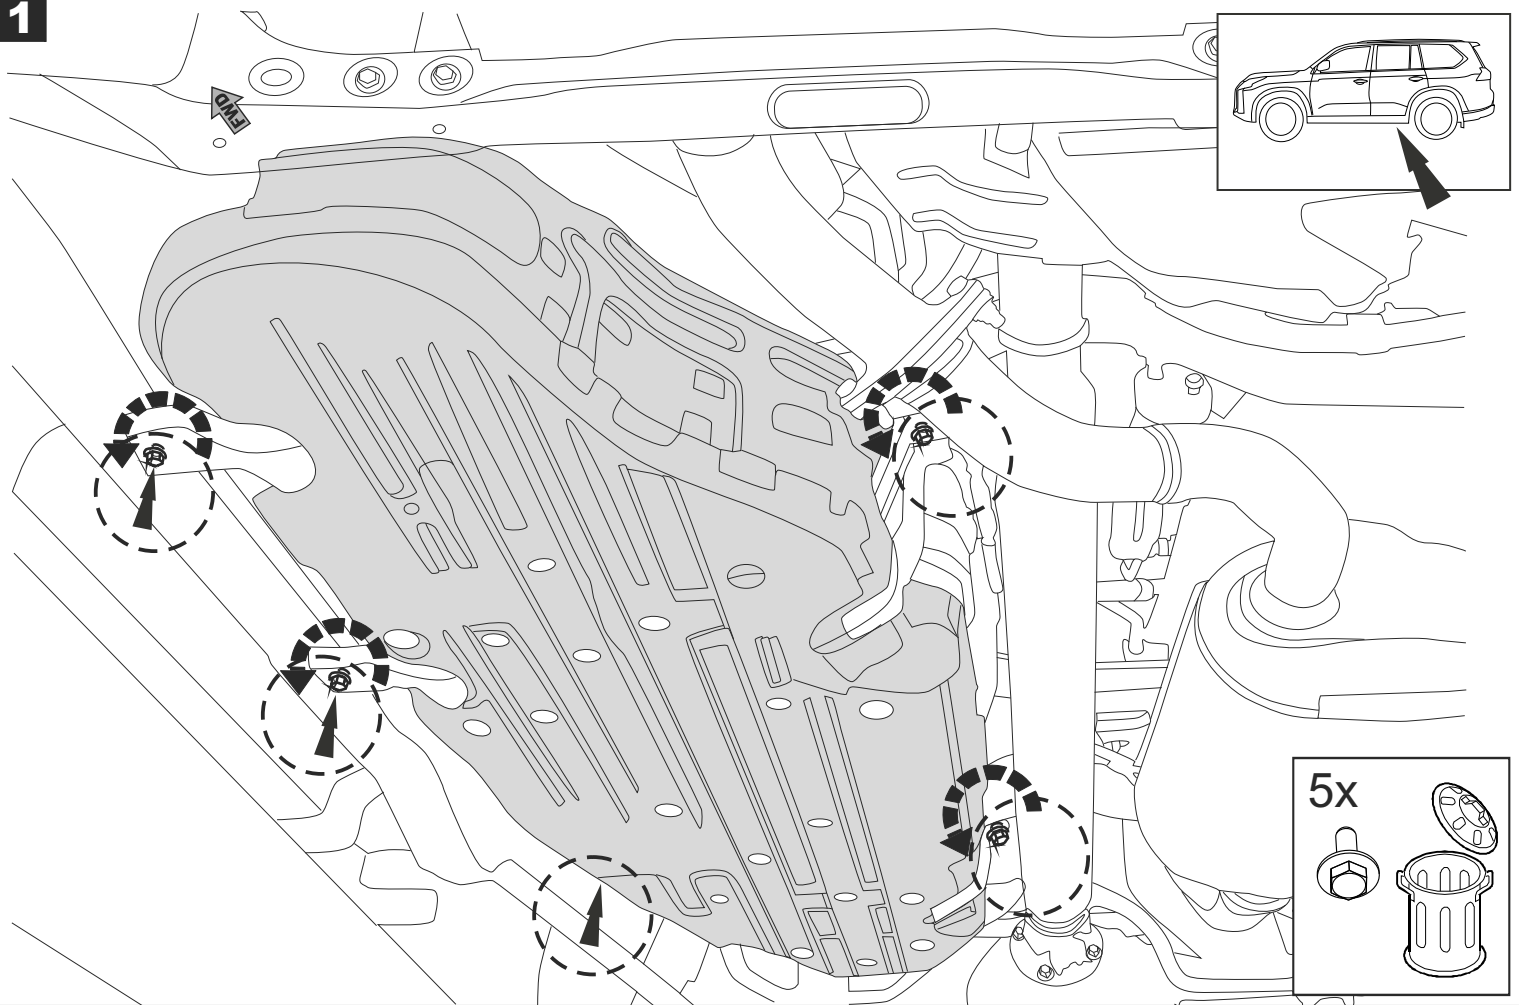

2

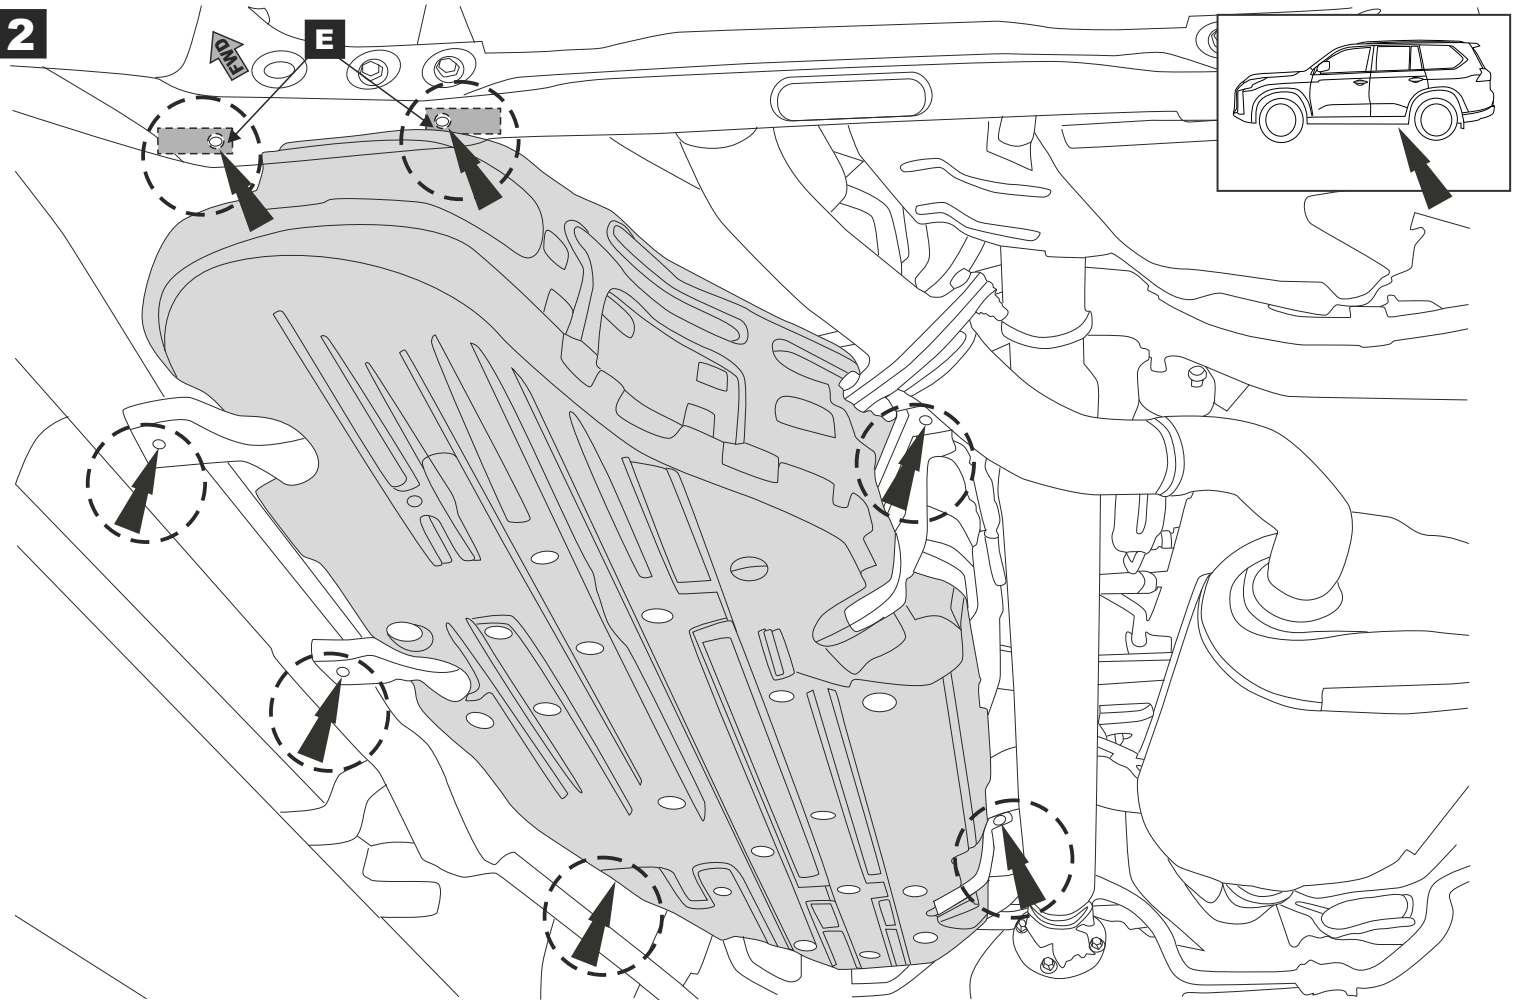

A line drawing of a car from a side profile. A large black arrow points from the bottom towards the rear wheel area.



24 Nm

D

H1

11

G1

D



A diagram illustrating the concept of a shadow. On the left, a stylized eye is shown looking towards the right. In the center, a vertical line represents a surface. To the right of this line is a rectangular object tilted at an angle. A black square labeled 'B' is positioned below the object, with an arrow pointing from it to the object, representing a shadow cast by the object.

B**B**


13 mm

24 Nm




11


G1

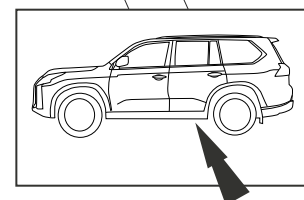

5

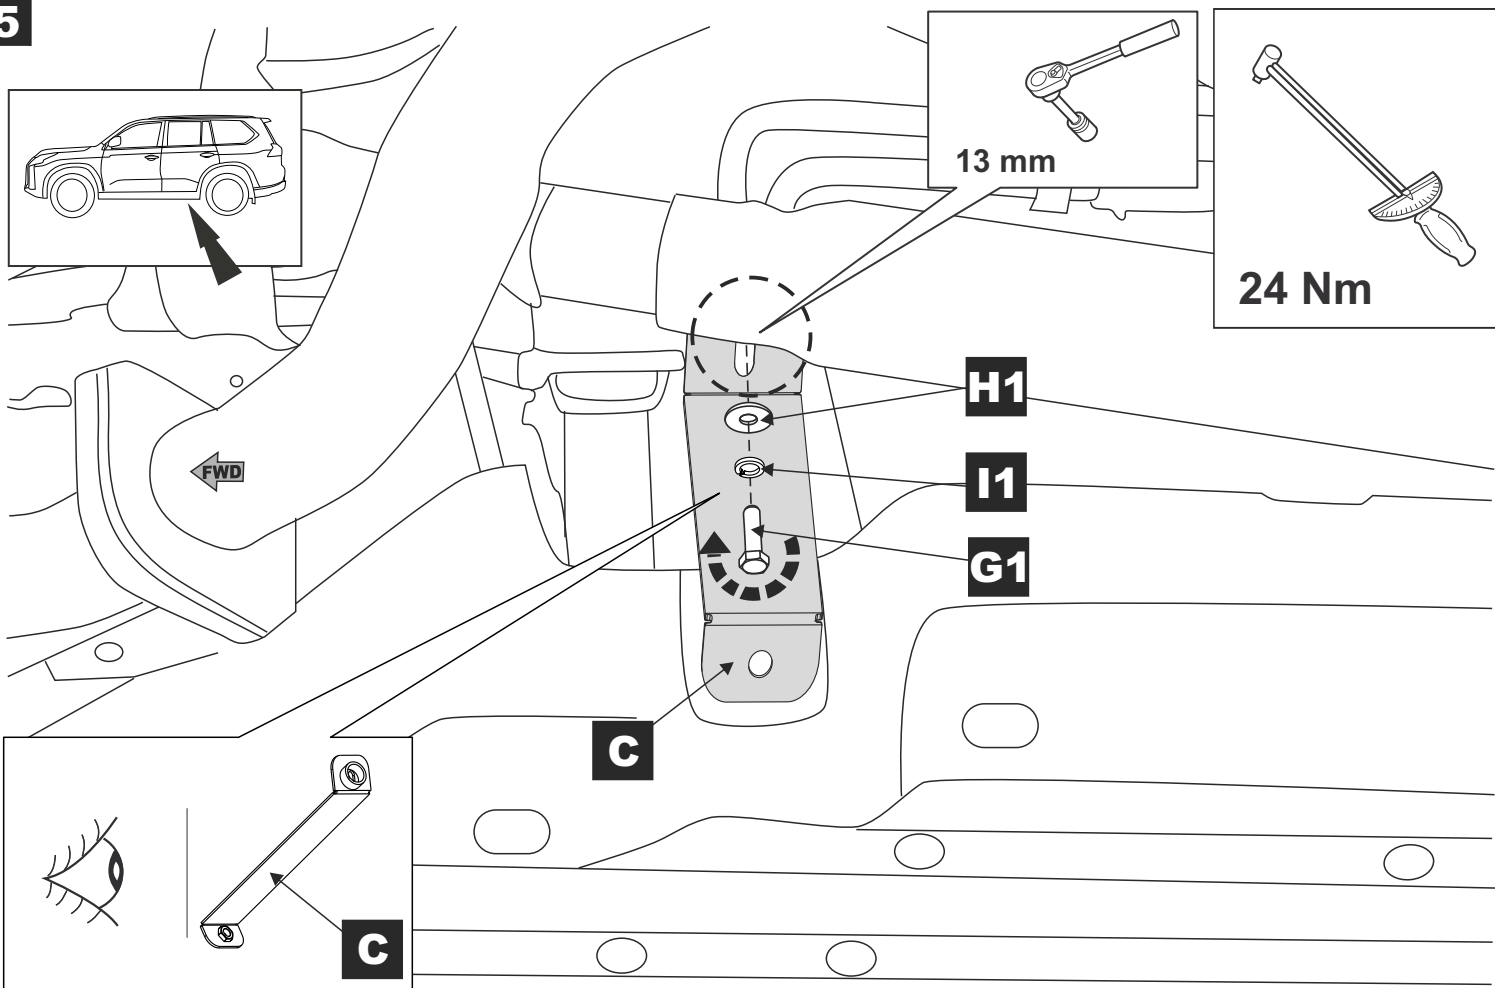

6

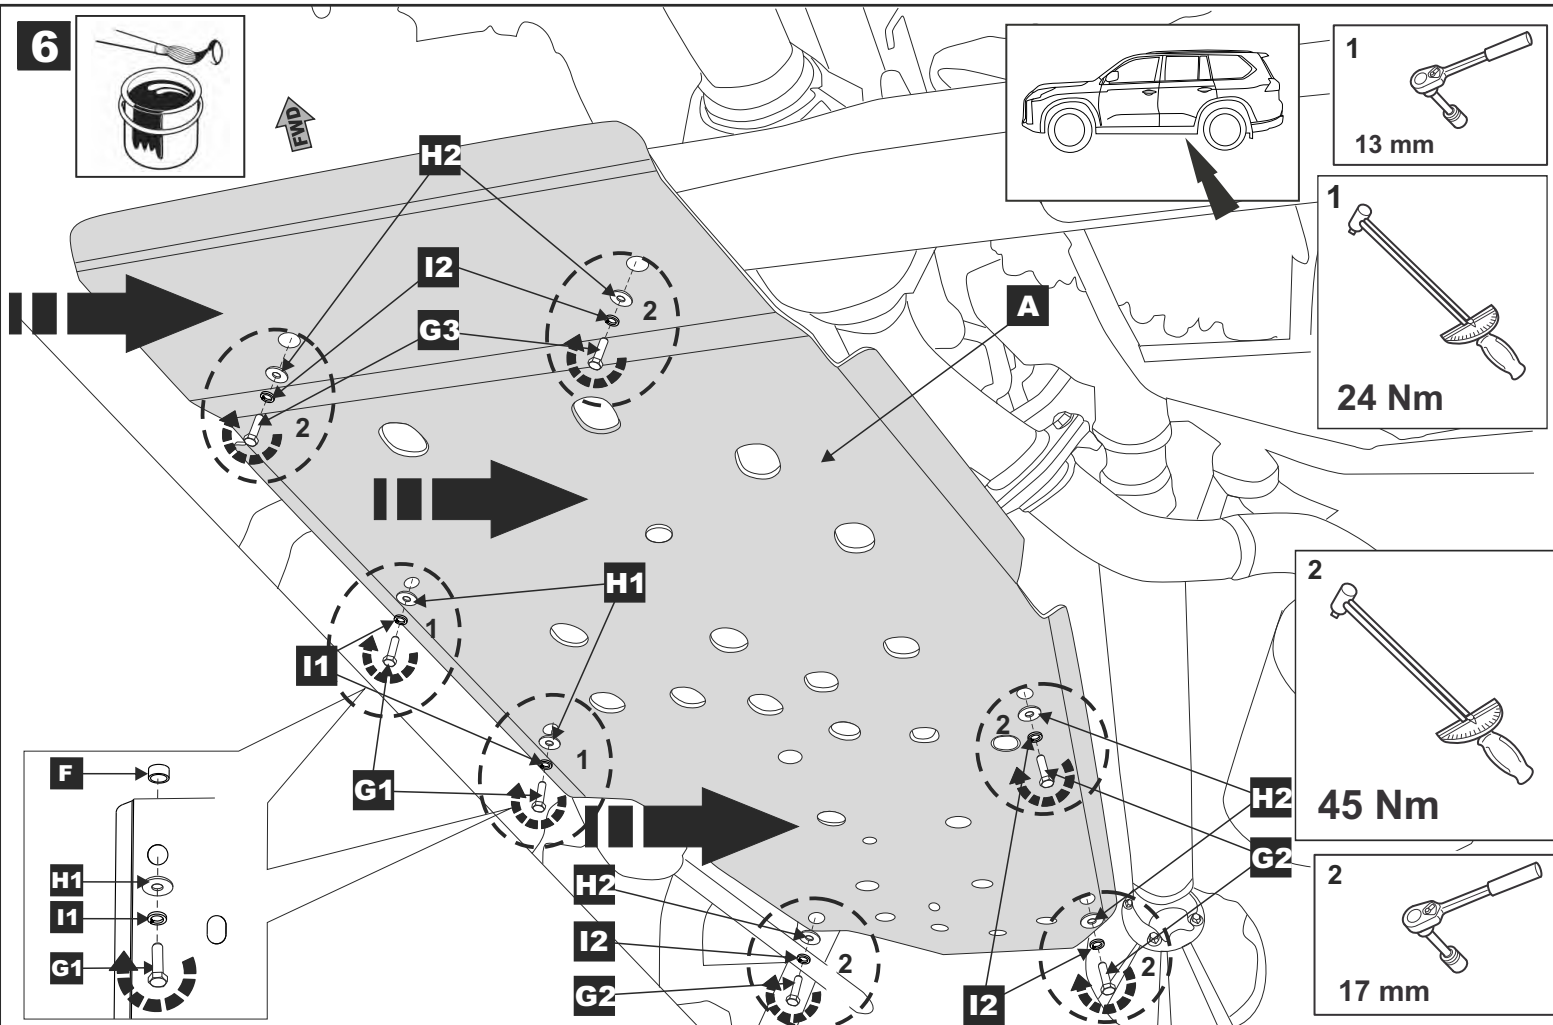

Part number:
PZ4AL-1597-00
PZ4AL-1588-00

Revision:
1

Date:
10.12.15

LC 200; LX570

Page:
5/6

7

END

