


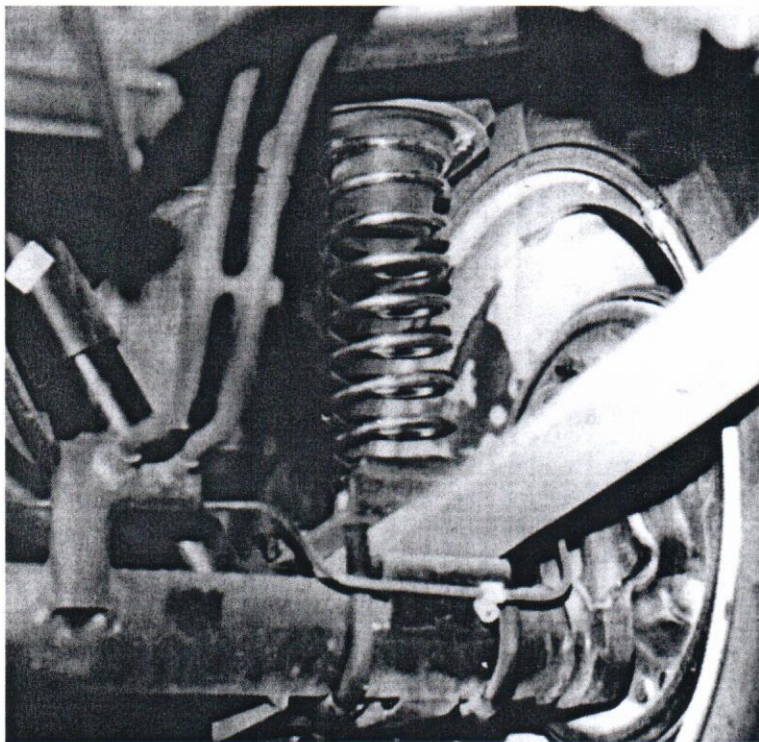

COME SI APPLICA:

- 1) Sollevare la vettura fino all'abbandono del ponte.
- 2) Togliere il tampone fine corsa, situato sulla traversa e sostituirlo con la staffa superiore in dotazione
- 3) Alloggiare al centro della balestra la staffa inferiore
- 4) Inserire la molla in dotazione nella staffa inferiore, fare pressione con le mani affinché entri nella staffa superiore
- 5) Controllare che le molle siano bene collocate nelle loro sedi in gomma.
- 6) Abbassare la vettura.

MODE D'APPLICATION:

- 1) Soulevez la voiture jusqu'à le pont est libre.
- 2) Enlevez le tampon de fin course, placé sur l'entretoise et remplacez-le par la patte supérieure en dotation
- 3) Placez la patte inférieure au milieu du ressort à lames;
- 4) Introduisez le ressort compensateur dans la patte inférieure, pressez avec les mains jusqu'à il entre dans la patte supérieure.
- 5) Vérifiez que les ressorts soient bien placés dans leur sièges en gomme.
- 6) Baissez la voiture.

APPLICATION:

- 1) Lift the car up to release the bridge.
- 2) Remove limit pad, placed on cross-bar, and replace it with endowed upper clip.
- 3) Place lower clip in the middle of leaf spring.
- 4) Insert auxiliary spring into lower clip, press with your hands to make it slide into upper clip.
- 5) Make sure that springs have been fitted correctly into their rubber seats.
- 6) Lower the car.